

Wallet Directions

Finished size: 8" x 3.5"

Supplies:

3/8 yard cotton, denim, canvas
3/8 yard contrast lining, cotton
1/8 yard interfacing
Thread



Seam Allowance is 3/8"

1. Print and assembly PDF pattern.

Print pattern PDF in color, this will make colored lines easier to piece together. Make sure to select "borderless" printing in your settings. Lay two pages with the red cardholder piece out matching the red lines. Tape cardholder together butting up papers' edges. Cut each piece out along colored lines. Mark top of cardholder piece on wrong side of the fabric.

2. Apply Interfacing

Iron interfacing onto coordinating pieces following manufacturer's directions.



3. Fold Cardholder.

Cardholder piece will end up being folded like an accordion in create slots to hold cards.


Right side facing you and starting from the top, fold bottom up at the first set of notches and press.



Then down at the next set of notches, press.




Back up at the next set of notches, press.

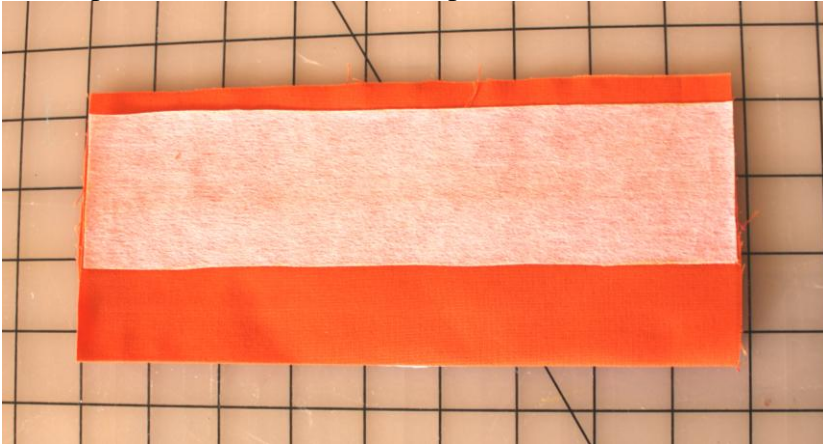


Then down at the last set of notches, press.
You should end up with a folded piece measuring 4'x8 3/4''.



Next, sew 2 rows of stitches vertically connecting notches located in the center top and bottom. Sew from the bottom to the top over folds.

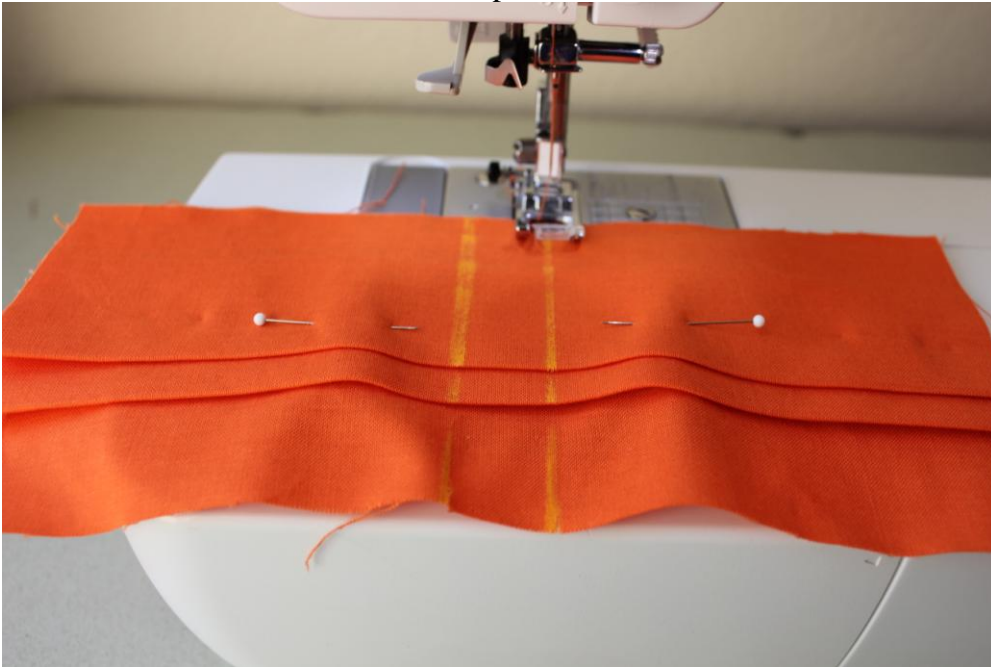

4. Now align the top edges of the cardholder you just created and the smaller lining piece and sew with right sides together.

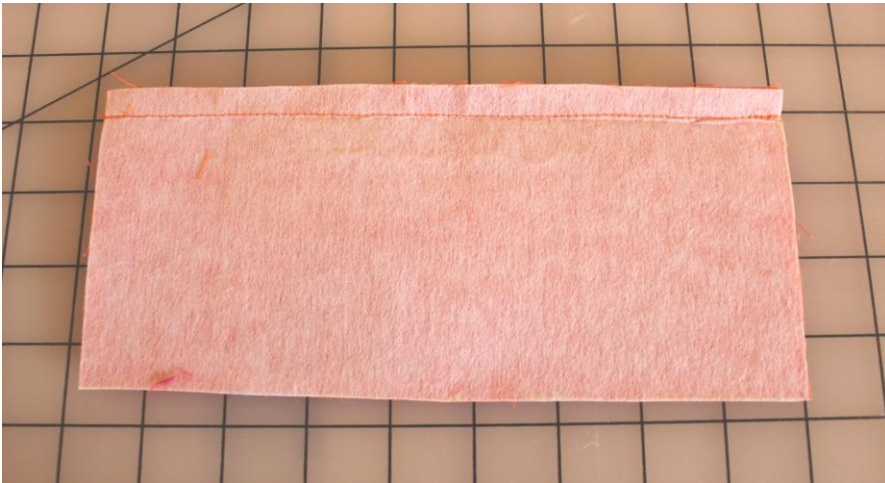

Turn so that the wrong sides face each other and, press. Topstitch all four sides.



5. Baste the assembled cardholder to the right side of the remaining lining piece with card slots facing you, aligning the bottom corners.



6. Place assembled lining and exterior piece with right sides facing, match notches and corners. Pin and sew leaving a 3” opening in the center bottom. Trim corners.



7. Turn right sides out and press. Topstitch around all four sides.

